2.Exploded Views and Parts List

2-1 Cassette Deck

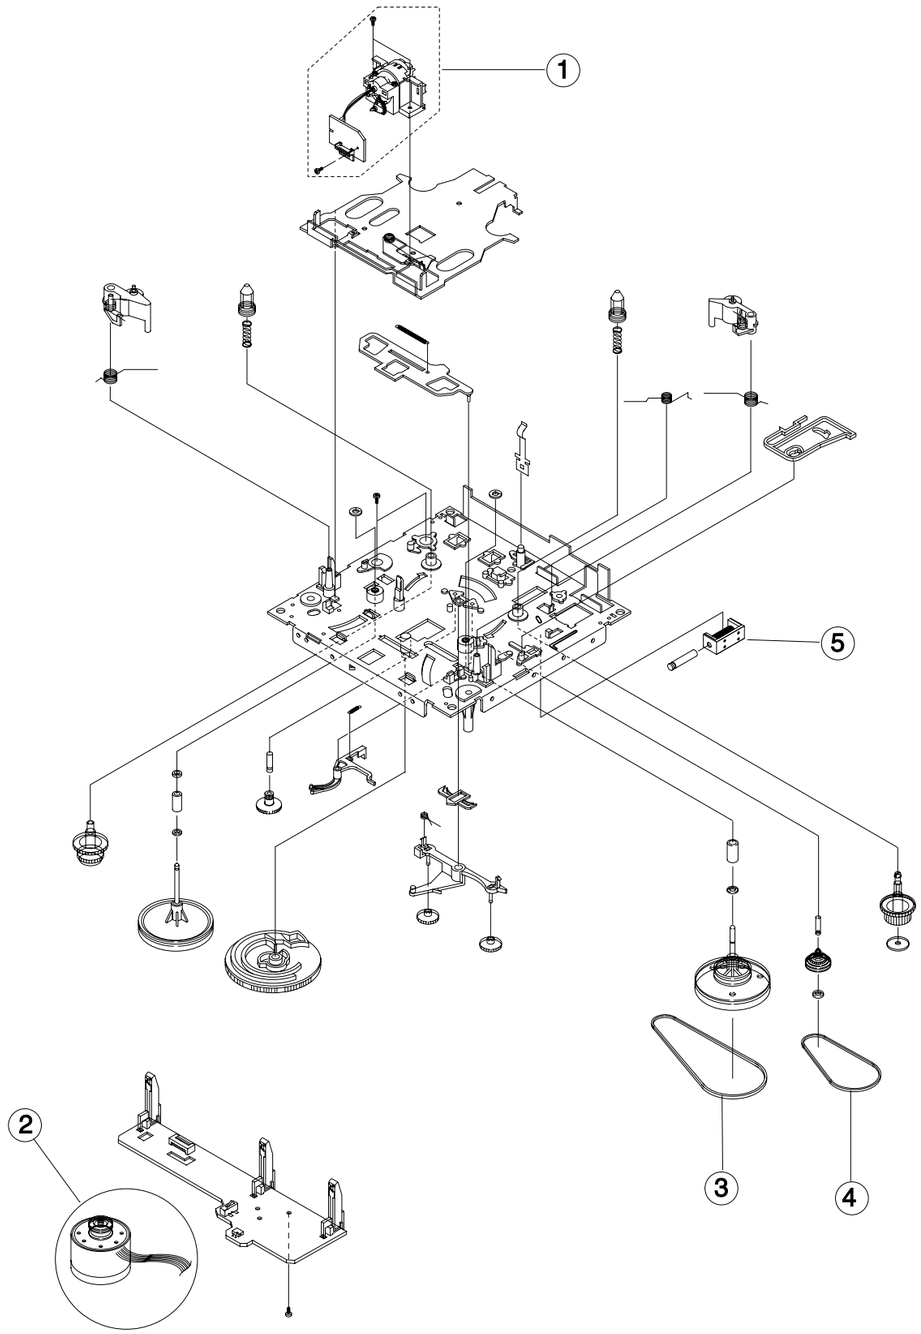

No.	Code No.	Description	Specification	Remarks
	AH59-01080A	**DECK-CASSETTE**	**ADR248BTR1**	**DC12V**
1	AH81-00098A	A/S-HEAD ASSY	TR981A,14KHZ	MT91-11011S
2	AH81-00422A	A/S-ASSY MOTOR	CCM090L2	MT91-15013Y
3	AH81-00100A	A/S-BELT MAIN	ADR2400S-MAIN	6602-001037
4	AH81-00101A	A/S-BELT SUB	ADR2400S,34.7	6602-001055
5	AH81-00102A	A/S-SOLENOID	ADR2400-1	MT75-00049A

2-2 Total Exploded View and Parts List ;MM-B7/ ZB7

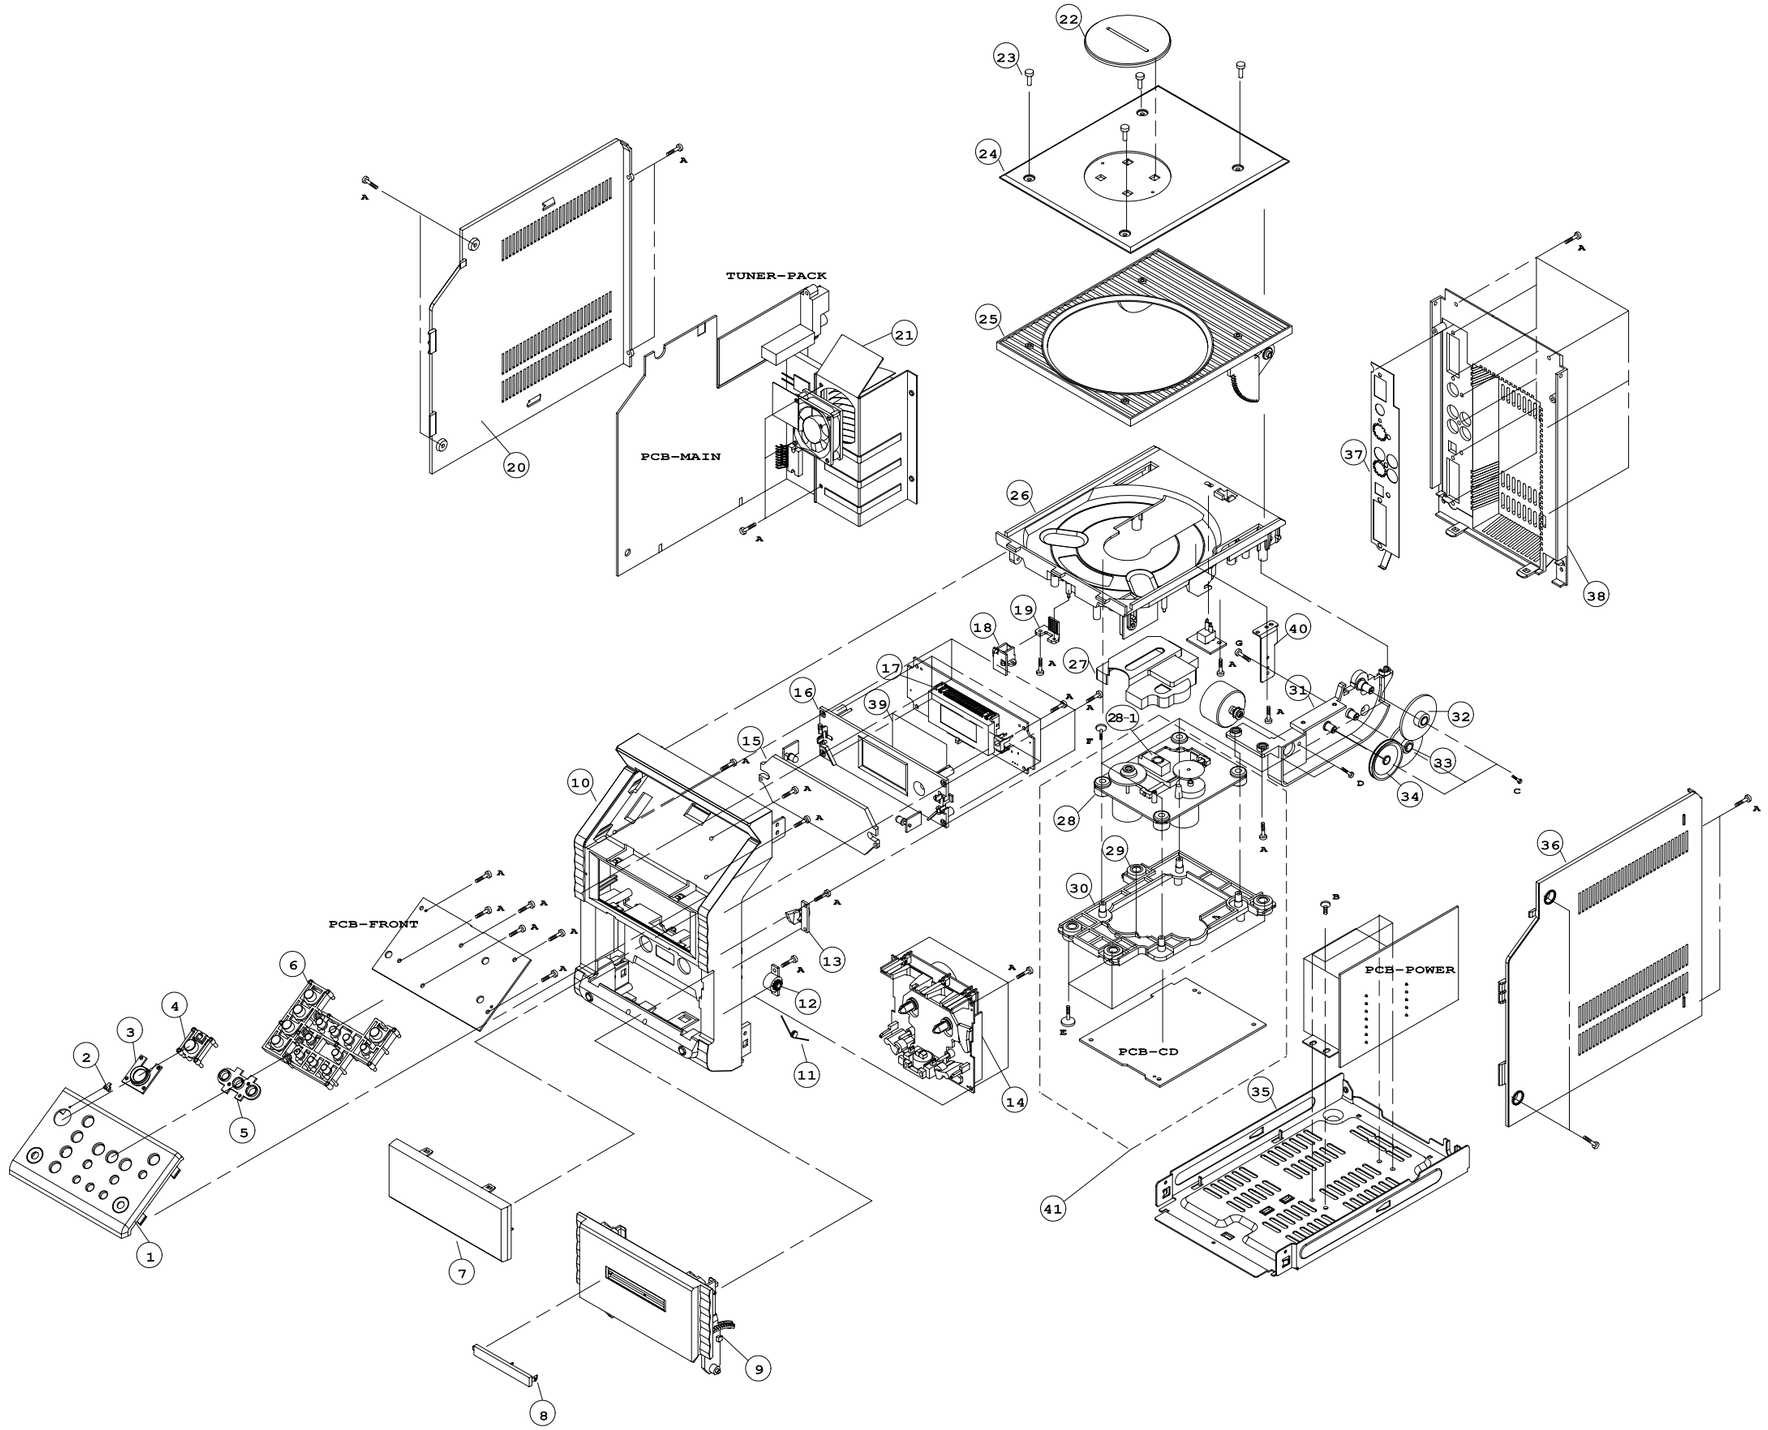

* Parts List

No.	Code No.	Description & Specification	Q'TY	Remarks
1	AH64-01899F	DECO-FRONT; ABS L/GRAY	1	
	AH64-01899G	DECO-FRONT; ABS L/GRAY	1	
2	AH67-00181A	LENS-STANDBY; PMMA MILKY	1	
3	AH67-00173A	LENS-POWER; PMMA RED	1	
4	AH64-01910B	KNOB-POWER; ABS L/GRAY	1	
5	AH67-00172A	LENS-DIR; PMMA BLUE	1	
6	AH64-01909B	KNOB-FUNCTION; ABS L/GRAY	1	
7	AH64-01908B	WINDOW-VFD; PMMA CLR SMOKE	1	
8	AH64-01907A	WINDOW-CASS; PC BLUE	1	
9	AH64-01902B	DOOR-CASS; ABS L/GRAY	1	
10	AH64-01894B	CABINET-FRONT; MIPS L/GRAY	1	
11	AH61-01073A	SPRING-EJ DOOR; SUS 304 1.0T	1	
12	AH61-80030A	ASSY DAMPER; POM M0.8	1	
13	AH95-50001A	ASSY LATCH; MAX 555	1	
14	AH59-01080A	DECK-CASSETTE	1	
15	AH67-00174B	LENS-VFD; PMMA CLR	1	
	AH67-00174C	LENS-VFD; PMMA CLR	1	
16	AH61-01070A	HOLDER-VFD LENS; ABS BLACK	1	
17	AH61-01075A	HOLDER-VFD; ABS BLACK	1	
18	AH61-00644A	HOLDER-ILLUMINATION; ABS	1	
19	AH67-00175A	LENS-CD L; PMMA MILKY	1	
20	AH64-01896B	CABINET-SIDE L; MIPS L/GRAY	1	
21	AH61-01071A	BRACKET-H/S; SECC 1.0T	1	
22	AH64-01900B	DECO-TOP; ABS L/GRAY	1	
23	AH64-01106G	DECO-SCREW; SWCH16	1	
24	AH64-01905B	WIINDOW-TOP MOTOR; PMMA CLR SMOKE	1	
25	AH64-01903B	DOOR-CD MOTOR; PC+ABS	1	
26	AH64-01898B	CABINET-TOP; MIPS L/GRAY	1	
27	AH61-20529B	CAP-P/U	1	
28	AH59-01082A	DECK-CDP; CMS-P31BG6, SOH	1	
28-1	AH30-00037A	PICK-UP; SOH-AAH(1H20L), 100*80*45	1	
29	AH73-00010A	RUBBER-HOLDER; BUTYL	4	
30	AH61-01068A	HOLDER-CD; PC+ABS	1	
31	AH61-01069A	HOLDER-GEAR; PC+ABS	1	
32	AH66-00103A	GEAR-B; POM BLACK	1	
33	AH66-00102A	GEAR-A; POM BLACK	1	
34	AH66-00101A	GEAR-PULLEY; POM BLACK	1	
35	AH64-01911A	CABINET-BOTTOM; SECC 1.0T	1	
36	AH64-01897B	CABINET-SIDE R; MIPS L/GRAY	1	
37	AH67-01072A	BRKT-GND; PBS 0.3t	1	
38	AH64-01895A	CABINET-REAR; MIPS L/GRAY	1	
	AH64-01895B	CABINET-REAR; MIPS L/GRAY	1	
39	AH63-00439A	FILTER-VFD; KIMO 100	1	
40	AH61-01128A	BRKT-H_GEAR:SECC T1.0	1	
41	AH59-01083A	DECK-CD PACK MECHA ASSY	1	
A	6003-000276	SCREW-TAP TITE: BH 3X10 YEL	50	
B	AH60-00014A	SCREW-TAP TITE: BH 4X6 YEL	4	
C	AH60-10001A	SCREW-TAP TITE: PWH 2X5 pi7	3	
D	AH60-10020B	SCREW: RH 2.6X5 YEL	2	
E	AH64-01106H	SCREW-TAP TITE: BWH 3X10 pi12	4	
F	AH60-10180A	SCREW-TAP TITE: BWH 2.6X10 YEL pi10	4	
G	6002-000126	SCREW-TAPING FH 3X10 BLK	2	

2-3 SPEAKER Exploded View and Parts list

* CAUTION : It is used the bonding, connect FRONT PANEL to CABINET WOODEN.
So when the disassembly, take extreme care not to demage the SPEAKER.

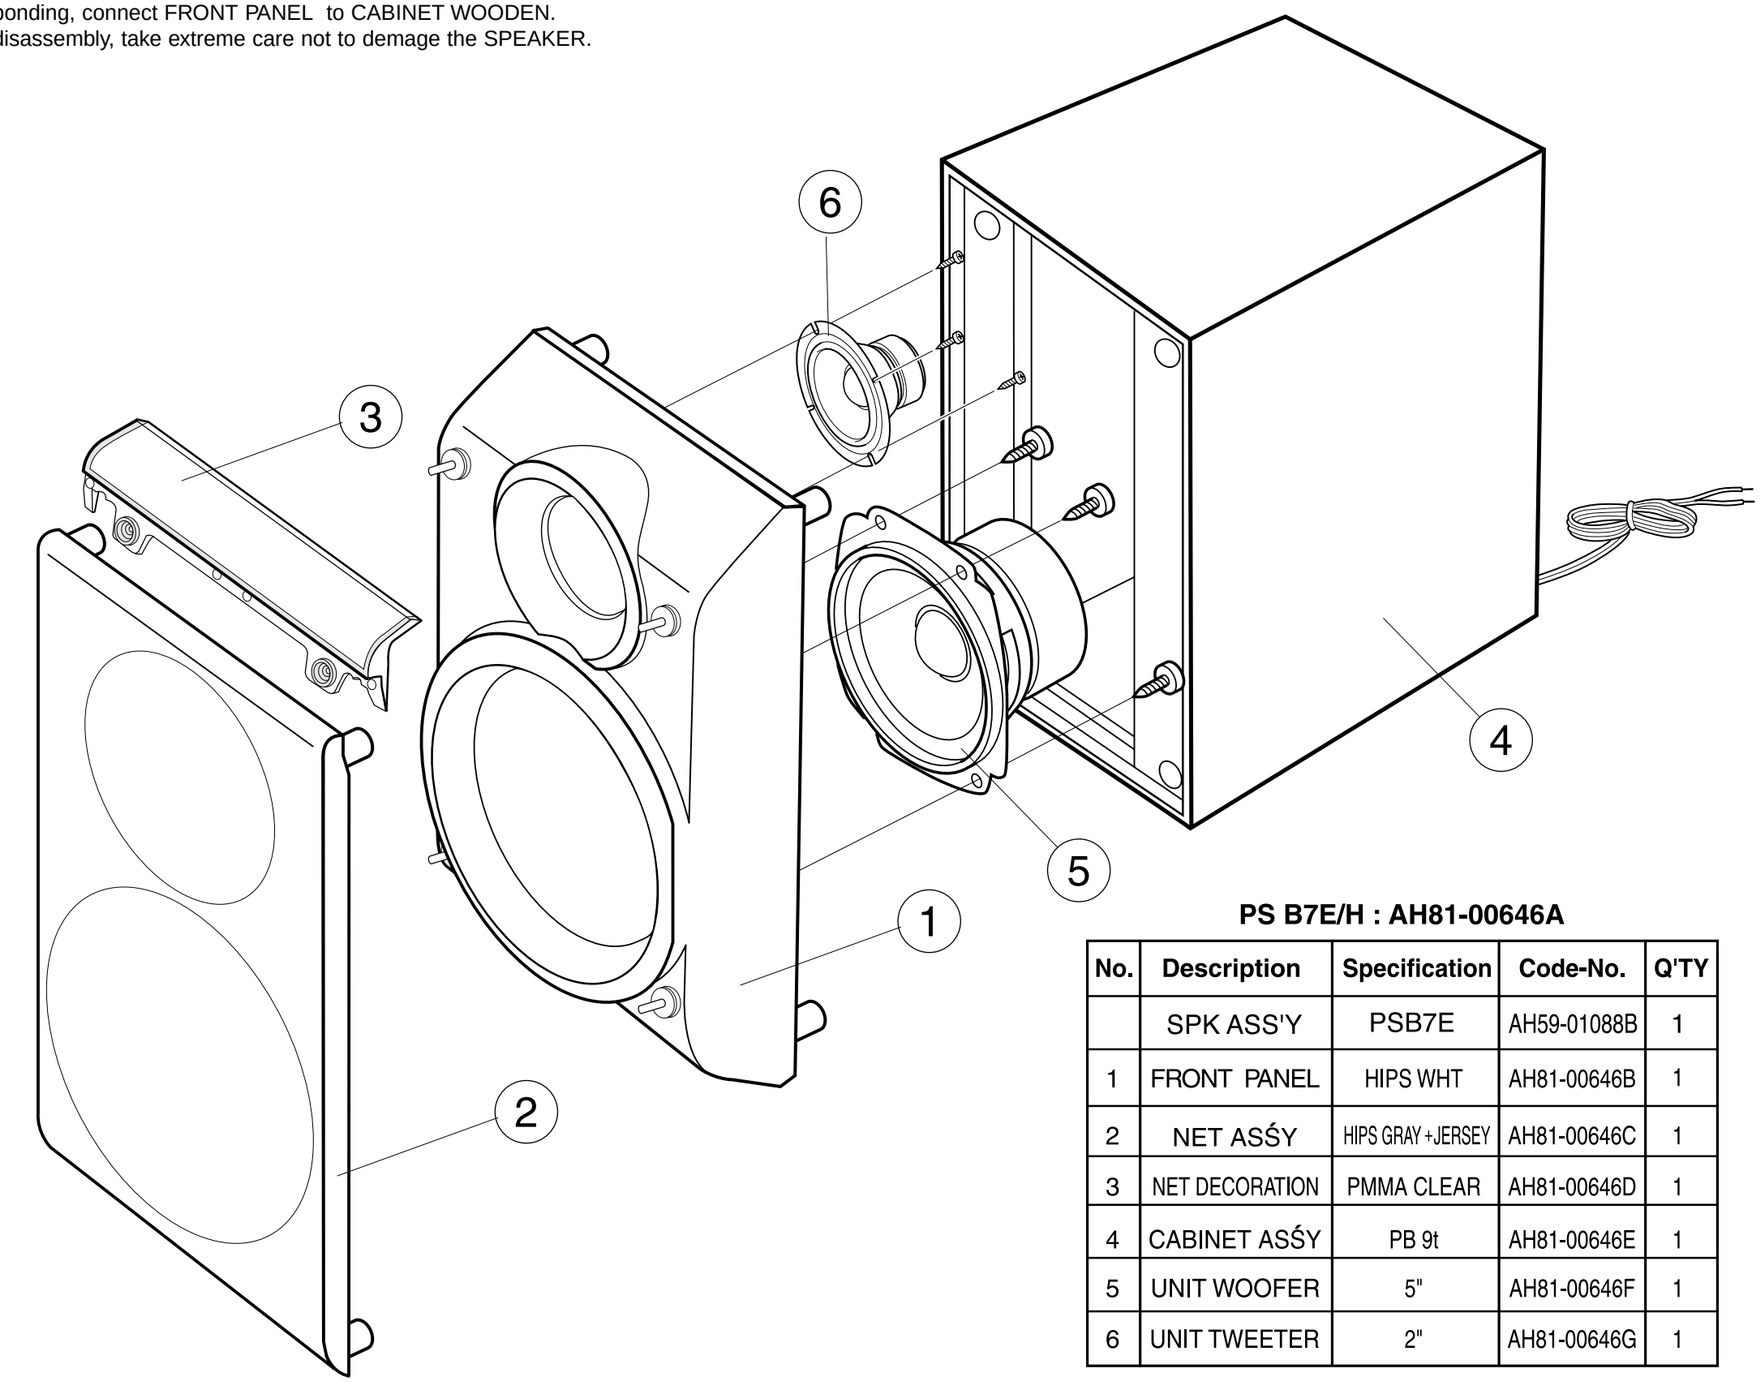

PS B7E/H : AH81-00646A

No.	Description	Specification	Code-No.	Q'TY
	SPK ASS'Y	PSB7E	AH59-01088B	1
1	FRONT PANEL	HIPS WHT	AH81-00646B	1
2	NET ASSY	HIPS GRAY +JERSEY	AH81-00646C	1
3	NET DECORATION	PMMA CLEAR	AH81-00646D	1
4	CABINET ASSY	PB 9t	AH81-00646E	1
5	UNIT WOOFER	5"	AH81-00646F	1
6	UNIT TWEETER	2"	AH81-00646G	1